



FINNISH SAUNA JF150


Specifications and assembly instructions

SPECIFICATIONS



| | |
|-------------------|---|
| Model | JF150 |
| Dimensions | 1500x1100x1900 mm |
| Number of persons | 3 |
| Wood | Hemlock, 48 mm |
| Glass | Transparent, tempered, 8 mm |
| Hinges | INOX |
| Control | Control panel with buttons |
| Operating time | Up to 90 min |
| Temperature | Up to 90 °C |
| Ventilation | Yes |
| Connectivity | USB, Bluetooth, Radio, App |
| Lighting | LED RGB starry sky |
| Stove | 4.5 kW, with thermostat, timer and volcanic stone |
| Connection | Schuko socket 230 V, 50 Hz, 25 A fuse or Three-phase: Euro socket 400 V, 50 Hz, 3 x 16 A fuses |
| Weight | 210 kg |

COMPONENTS

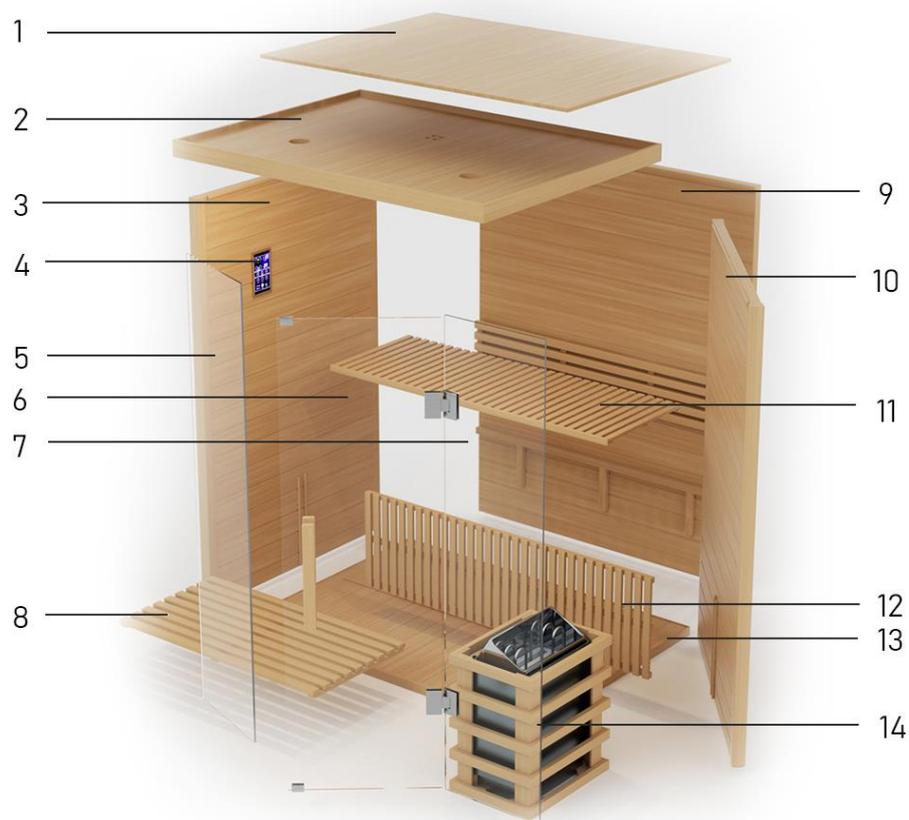

1 Cover plate

2 Ceiling panel

3 Left side

4 Control panel

5 Left glass panel

6 Doors

7 Right glass panel

8 Platform

9 Back plate

10 Right side

11 Bench

12 The front side of the bench

13 Bottom

14 Stove

RECOMMENDED TOOLS



Screwdriver



Meter



Screwdriver



Screws



Water scale



Imbus key



Knife




Ladder

ASSEMBLY TIPS

Please remove the transport packaging and check that your sauna has been delivered complete and undamaged before starting assembly. At least two people are needed to assemble the sauna.



ASSEMBLY STEPS

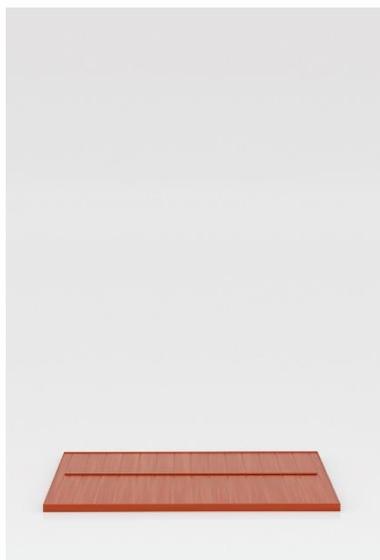

1. Bottom



2. Back plate



3. Left side



4. Right side



5. The front panel of the bench



6. Bench



7. Landing



8. Heater frame



9. Heater





10. Ceiling panel



11. Right glass panel



12. left glass panel



13. door






14. Handle



15. Cover plate



Installing the outer buckle

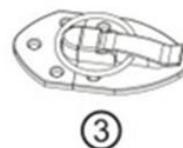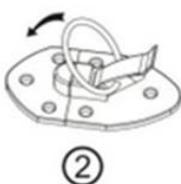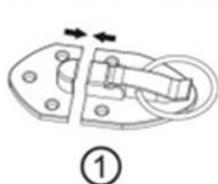

Connecting electrical components



1. Connect the blue UTP cable from the control panel to the sauna control unit.



2. Connect the power cables between the control unit and the stove.

Installation of hinges, handle and cover



1. Install hinges



2. Install the handle



3. Install the cover plate



CONNECTING THE STOVE TO THE ELECTRICAL NETWORK

AC out is connected to the stove without grounding. (GRND)




AC in - conductor 5 x 2.5 mm² (supplied by customer)

AC out – cable (included with purchase), which goes along the side to the furnace.

Contact cable between control plates and stove.

230 V Schuko plug

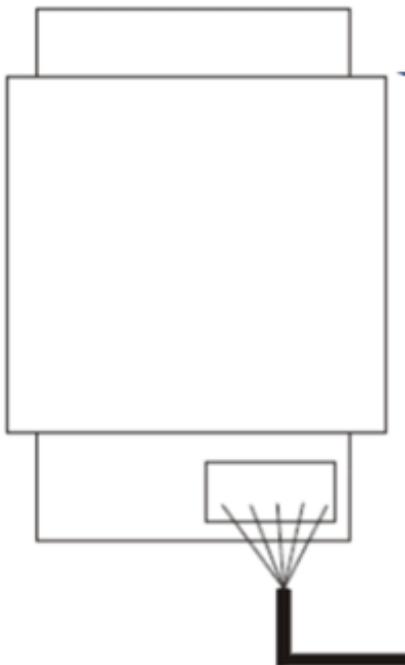


Removing information plate enables connection



UTP cable (communication between control panel and control unit)



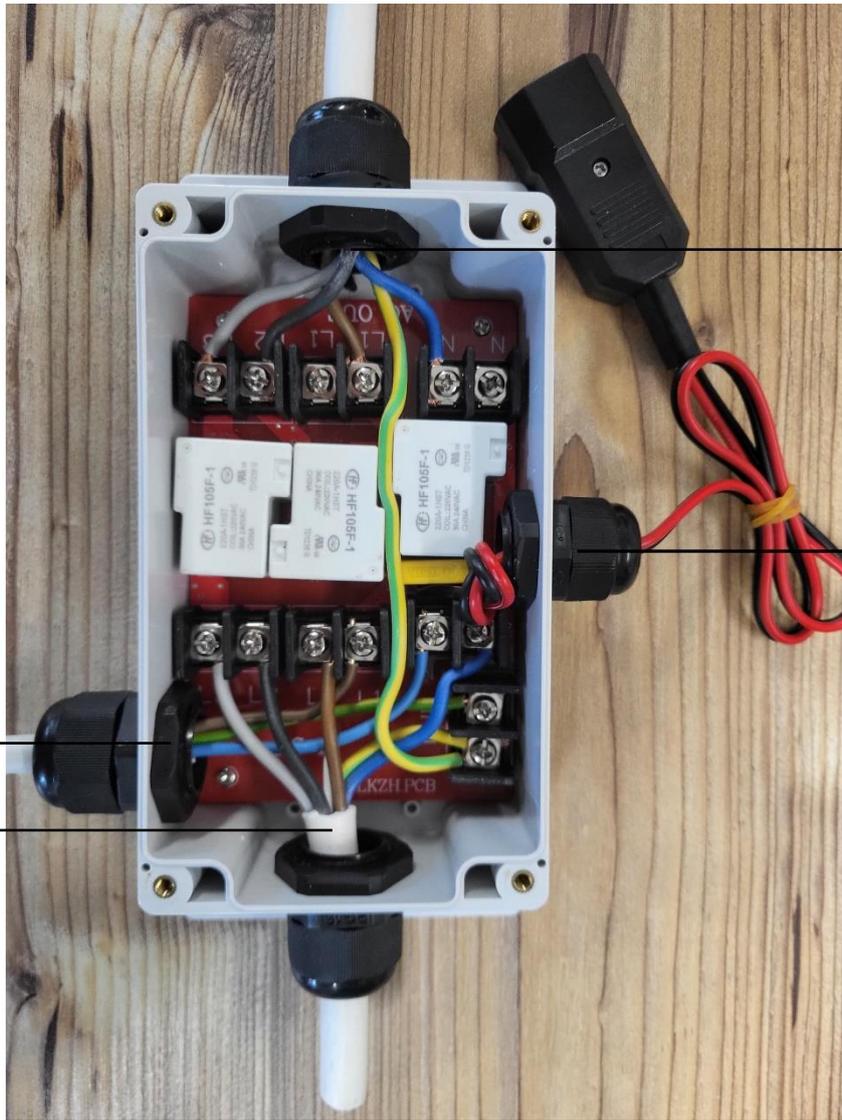

Control unit power supply

Your line (IN):
3 x 4 mm² conductor
or
5 x 2.5 mm² conductor
(0)

Line or guide
in the stove (OUT):
conductor 3 x 4 mm²
or
conductor 5 x 2.5 mm²
(0)

Communication with the
control unit

